



Wheel-Load Weigher Report of Test

Test No: W18-028

Issued: 04/10/2018

**For: NYS Police Traffic Section, Troop D
Building 22, State Campus
Albany, NY 12226**

The scales listed below have been compared to standards of New York State which are traceable to the National Institute of Standards and Technology. Tolerances are 2% of applied test load. Scale sets are tested as a pair and must be used as such. Note: An * in Status field indicates security seals from previous test were broken.

Set	DD13	Scale Mfr/Model: Haenni / WL101	Serial Nos: 18073 & 18074			
		Indicator Mfr/Model: N/A / N/A	Serial No: N/A			
	Tested	04/06/2018 - 8:41	Status: Pass			
		Load/Reading	8899 / 8875	19538 / 19400	29224 / 29150	39700 / 39575
						Test: p
Set	DD14	Scale Mfr/Model: Haenni / WL101	Serial Nos: 18075 & 18076			
		Indicator Mfr/Model: N/A / N/A	Serial No: N/A			
	Tested	04/06/2018 - 8:38	Status: Pass			
		Load/Reading	9344 / 9300	19110 / 18850	28766 / 28525	39479 / 39025
						Test: p
Set	DD15	Scale Mfr/Model: Haenni / WL101	Serial Nos: 19890 & 19891			
		Indicator Mfr/Model: N/A / N/A	Serial No: N/A			
	Tested	04/04/2018 - 11:47	Status: Pass			
		Load/Reading	8872 / 8925	19083 / 18925	28655 / 28625	38938 / 38775
						Test: p
Set	DD16	Scale Mfr/Model: Haenni / WL101	Serial Nos: 19892 & 19893			
		Indicator Mfr/Model: N/A / N/A	Serial No: N/A			
	Tested	04/03/2018 - 12:25	Status: Pass			
		Load/Reading	8171 / 8225	19191 / 19400	28774 / 29075	38031 / 38425
						Test: p
Set	DD17	Scale Mfr/Model: Haenni / WL101	Serial Nos: 19894 & 19895			
		Indicator Mfr/Model: N/A / N/A	Serial No: N/A			
	Tested	04/03/2018 - 12:36	Status: Pass			
		Load/Reading	8241 / 8300	18582 / 18525	28434 / 28350	38526 / 38500
						Test: p
Set	DD18	Scale Mfr/Model: Haenni / WL101	Serial Nos: 21557 & 21558			
		Indicator Mfr/Model: N/A / N/A	Serial No: N/A			
	Tested	04/05/2018 - 11:48	Status: Pass			
		Load/Reading	9333 / 9200	19479 / 19275	29251 / 29050	39755 / 39475
		Load/Reading	9152 / 8900	19699 / 19250	29777 / 29175	39863 / 39175
						Test: f

Set DD19	Scale Mfr/Model: Haenni / WL101	Serial Nos: 21559 & 21560			
	Indicator Mfr/Model: N/A / N/A	Serial No: N/A			
Tested	04/04/2018 - 12:11	Status: Pass			
	Load/Reading 8854 / 8900	19081 / 18775	28754 / 28475	38940 / 38475	Test: p
Set DD20	Scale Mfr/Model: Haenni / WL101	Serial Nos: 21561 & 21562			
	Indicator Mfr/Model: N/A / N/A	Serial No: N/A			
Tested	04/04/2018 - 12:06	Status: Pass			
	Load/Reading 8842 / 8875	18554 / 18675	28292 / 28450	38381 / 38475	Test: p
Set DD21	Scale Mfr/Model: Haenni / WL101	Serial Nos: 21563 & 21564			
	Indicator Mfr/Model: N/A / N/A	Serial No: N/A			
Tested	04/04/2018 - 9:20	Status: Pass			
	Load/Reading 9105 / 9150	19766 / 19750	29608 / 29575	39381 / 39375	Test: p
Set DD22	Scale Mfr/Model: Haenni / WL101	Serial Nos: 21565 & 21566			
	Indicator Mfr/Model: N/A / N/A	Serial No: N/A			
Tested	04/09/2018 - 11:36	Status: Pass			
	Load/Reading 8962 / 8950	18424 / 18550	28436 / 28700	37454 / 37750	Test: p
Set DD23	Scale Mfr/Model: Haenni / WL101	Serial Nos: 21567 & 21568			
	Indicator Mfr/Model: N/A / N/A	Serial No: N/A			
Tested	04/04/2018 - 9:16	Status: Pass			
	Load/Reading 9002 / 9025	19186 / 19275	28895 / 29075	38786 / 39075	Test: p
Set DD24	Scale Mfr/Model: Haenni / WL101	Serial Nos: 21569 & 21570			
	Indicator Mfr/Model: N/A / N/A	Serial No: N/A			
Tested	04/04/2018 - 12:42	Status: Pass			
	Load/Reading 8772 / 8625	18844 / 18725	28766 / 28725	38731 / 38675	Test: p
Set DD25	Scale Mfr/Model: Haenni / WL101	Serial Nos: 21571 & 21572			
	Indicator Mfr/Model: N/A / N/A	Serial No: N/A			
Tested	04/04/2018 - 12:30	Status: Pass			
	Load/Reading 8716 / 8675	18875 / 18625	28882 / 28425	39099 / 38450	Test: p
Set DD26	Scale Mfr/Model: Haenni / WL101	Serial Nos: 21573 & 21574			
	Indicator Mfr/Model: N/A / N/A	Serial No: N/A			
Tested	04/05/2018 - 12:45	Status: Pass			
	Load/Reading 9152 / 9150	19557 / 19550	29328 / 29350	39425 / 39425	Test: p
Set DD28	Scale Mfr/Model: Haenni / W101	Serial Nos: 27256 & 27257			
	Indicator Mfr/Model:	Serial No:			
Tested	04/06/2018 - 8:35	Status: Pass			
	Load/Reading 9181 / 9350	19373 / 19650	29603 / 29550	39316 / 39200	Test: p
Set DD29	Scale Mfr/Model: Haenni / W101	Serial Nos: 27258 & 27259			
	Indicator Mfr/Model:	Serial No:			
Tested	04/05/2018 - 12:42	Status: Pass			
	Load/Reading 8899 / 8950	19212 / 19275	28856 / 29000	39057 / 39175	Test: p
Set DD30	Scale Mfr/Model: Haenni / WL101	Serial Nos: 28874 & 28875			
	Indicator Mfr/Model: N/A / N/A	Serial No:			
Tested	04/05/2018 - 9:43	Status: Pass			
	Load/Reading 8871 / 8950	18599 / 18625	28653 / 28650	38136 / 38300	Test: p

Set DD31	Scale Mfr/Model: Haenni / WL101	Serial Nos: 30180 & 30181			
	Indicator Mfr/Model: N/A / N/A	Serial No:			
Tested	04/04/2018 - 11:58	Status: Pass			
	Load/Reading	9082 / 9150	17923 / 18075	28727 / 28900	38302 / 38550
					Test: p
Set DD32	Scale Mfr/Model: Haenni / WL101	Serial Nos: 30182 & 30183			
	Indicator Mfr/Model: N/A / N/A	Serial No:			
Tested	04/03/2018 - 12:30	Status: Pass			
	Load/Reading	8477 / 8550	18727 / 18875	28103 / 28225	37972 / 38200
					Test: p
Set DD33	Scale Mfr/Model: Haenni / WL101	Serial Nos: 30185 & 30186			
	Indicator Mfr/Model: N/A / N/A	Serial No:			
Tested	04/05/2018 - 9:38	Status: Pass			
	Load/Reading	9305 / 9225	19173 / 19100	28765 / 28650	38191 / 38275
					Test: p
Set DD34	Scale Mfr/Model: Haenni / WL101	Serial Nos: 30187 & 30188			
	Indicator Mfr/Model: N/A / N/A	Serial No:			
Tested	04/05/2018 - 9:32	Status: Pass			
	Load/Reading	9150 / 9025	19791 / 19550	29265 / 28850	38539 / 38350
					Test: p
Set DD35	Scale Mfr/Model: Haenni / WL101	Serial Nos: 31473 & 31474			
	Indicator Mfr/Model: N/A / N/A	Serial No:			
Tested	04/06/2018 - 8:49	Status: Pass			
	Load/Reading	9734 / 9725	18906 / 18825	28949 / 28875	39066 / 39075
					Test: p
Set DD36	Scale Mfr/Model: Haenni / WL101	Serial Nos: 31471 & 31472			
	Indicator Mfr/Model: N/A / N/A	Serial No:			
Tested	04/04/2018 - 12:36	Status: Pass			
	Load/Reading	8654 / 8700	18282 / 18375	28302 / 28450	38282 / 38475
					Test: p
Set DD37	Scale Mfr/Model: Haenni / WL101	Serial Nos: 31469 & 31470			
	Indicator Mfr/Model: N/A / N/A	Serial No:			
Tested	04/09/2018 - 11:41	Status: Pass			
	Load/Reading	8834 / 8900	18551 / 18650	28298 / 28300	38520 / 38600
					Test: p
Set DD38	Scale Mfr/Model: Haenni / WL101	Serial Nos: 32252 & 32253			
	Indicator Mfr/Model: N/A / N/A	Serial No:			
Tested	04/04/2018 - 9:23	Status: Pass			
	Load/Reading	8823 / 8875	19200 / 19175	29363 / 29300	39109 / 39075
					Test: p
Set DD39	Scale Mfr/Model: Haenni / WL101	Serial Nos: 32254 & 32255			
	Indicator Mfr/Model: N/A / N/A	Serial No:			
Tested	04/06/2018 - 8:53	Status: Pass			
	Load/Reading	8906 / 8900	19390 / 19275	28943 / 28725	39366 / 39075
					Test: p
Set DD40	Scale Mfr/Model: Haenni / WL101	Serial Nos: 32256 & 32257			
	Indicator Mfr/Model: N/A / N/A	Serial No:			
Tested	04/04/2018 - 11:52	Status: Pass			
	Load/Reading	8852 / 8800	18866 / 18850	28675 / 28700	38222 / 38325
					Test: p
Set DD41	Scale Mfr/Model: Haenni / WL101	Serial Nos: 33443 & 33444			
	Indicator Mfr/Model: N/A / N/A	Serial No:			
Tested	04/05/2018 - 12:53	Status: Pass			
	Load/Reading	9220 / 9250	19432 / 19375	29249 / 29125	39685 / 39600
					Test: p

Set DD42	Scale Mfr/Model: Haenni / WL101	Serial Nos: 38250 & 38251
	Indicator Mfr/Model: N/A / N/A	Serial No:
Tested	04/06/2018 - 8:45	Status: Pass
	Load/Reading 8692 / 8650 18552 / 18425	29109 / 29050 38939 / 38975
Set DD43	Scale Mfr/Model: Haenni / WL101	Serial Nos: 38714 & 38715
	Indicator Mfr/Model: N/A / N/A	Serial No:
Tested	04/06/2018 - 8:56	Status: Pass
	Load/Reading 8862 / 8875 18763 / 18700	28731 / 28700 38865 / 38850
Set DDD2	Scale Mfr/Model: Intercomp / AX900	Serial Nos: 13001/13003 & 13002/13004
	Indicator Mfr/Model: Intercomp / PT-20	Serial No: 12181F13001
Tested	04/04/2018 - 14:01	Status: Pass
L1	Load/Reading 5000 / 5000 10000 / 10000	15000 / 15000 20000 / 20050
L1a	Load/Reading 25000 / 25050 30000 / 30050	
L2	Load/Reading 5000 / 5000 10000 / 10000	15000 / 15000 20000 / 20000
L2a	Load/Reading 25000 / 25000 30000 / 30000	
R1	Load/Reading 5000 / 5000 10000 / 10000	15000 / 15000 20000 / 19950
R1a	Load/Reading 25000 / 25000 30000 / 30000	
R2	Load/Reading 5000 / 5000 10000 / 10000	15000 / 15000 20000 / 20000
R2a	Load/Reading 25000 / 25050 30000 / 30050	
		Test: p
		Test: p
		Test: p
		Test: p
		Test: p
		Test: p
		Test: p
		Test: p

Weights and Measures Officials

[Signature]
 Matt 7A
[Signature]

Enforcement Officials

[Signature]