



Agriculture and Markets

10B Airline Drive, Albany, New York 12235
1-800-554-4501
www.agriculture.ny.gov

Bureau of Weights and Measures
518-457-3452
FAX: 518-457-2552

Wheel-Load Weigher Report of Test

Test No: W19-079

Issued: 10/23/2019

For: NYS Police Traffic Section, Troop D
Building 22, State Campus
Albany, NY 12226

The scales listed below have been compared to standards of New York State which are traceable to the National Institute of Standards and Technology. Tolerances are 2% of applied test load. Scale sets are tested as a pair and must be used as such. Note: An * in Status field indicates security seals from previous test were broken.

Set	DD15	Scale Mfr/Model: Haenni / WL101	Serial Nos: 19890 & 19891
		Indicator Mfr/Model: N/A / N/A	Serial No: N/A
	Tested	10/16/2019 - 12:49	Status: Pass
		Load/Reading 9035 / 9050	18874 / 18900
		28968 / 28925	38678 / 38700
			Test: p
Set	DD16	Scale Mfr/Model: Haenni / WL101	Serial Nos: 19892 & 19893
		Indicator Mfr/Model: N/A / N/A	Serial No: N/A
	Tested	10/22/2019 - 11:09	Status: Pass
		Load/Reading 9432 / 9500	19501 / 19625
		29305 / 29500	39162 / 39475
			Test: p
Set	DD17	Scale Mfr/Model: Haenni / WL101	Serial Nos: 19894 & 19895
		Indicator Mfr/Model: N/A / N/A	Serial No: N/A
	Tested	10/22/2019 - 11:12	Status: Pass
		Load/Reading 9025 / 9150	19542 / 19600
		29354 / 29425	39098 / 39150
			Test: p
Set	DD19	Scale Mfr/Model: Haenni / WL101	Serial Nos: 21559 & 21560
		Indicator Mfr/Model: N/A / N/A	Serial No: N/A
	Tested	10/23/2019 - 8:42	Status: Pass
		Load/Reading 10161 / 10075	19783 / 19500
		30088 / 29700	39979 / 39450
			Test: p
Set	DD20	Scale Mfr/Model: Haenni / WL101	Serial Nos: 21561 & 21562
		Indicator Mfr/Model: N/A / N/A	Serial No: N/A
	Tested	10/23/2019 - 8:45	Status: Pass
		Load/Reading 9616 / 9650	18846 / 18950
		28555 / 28675	38784 / 38875
			Test: p
Set	DD21	Scale Mfr/Model: Haenni / WL101	Serial Nos: 21563 & 21564
		Indicator Mfr/Model: N/A / N/A	Serial No: N/A
	Tested	10/17/2019 - 12:21	Status: Pass
		Load/Reading 9112 / 9150	18889 / 18950
		28760 / 28875	38377 / 38500
			Test: p

Set DD22	Scale Mfr/Model: Haenni / WL101	Serial Nos: 21565 & 21566				
	Indicator Mfr/Model: N/A / N/A	Serial No: N/A				
Tested	10/23/2019 - 11:28	Status: Pass				
	Load/Reading 9474 / 9500	19329 / 19450	29241 / 29500	38628 / 38850		Test: p
Set DD23	Scale Mfr/Model: Haenni / WL101	Serial Nos: 21567 & 21568				
	Indicator Mfr/Model: N/A / N/A	Serial No: N/A				
Tested	10/17/2019 - 12:13	Status: Pass				
	Load/Reading 8673 / 8775	18332 / 18600	28317 / 28550	37912 / 38400		Test: p
Set DD26	Scale Mfr/Model: Haenni / WL101	Serial Nos: 21573 & 21574				
	Indicator Mfr/Model: N/A / N/A	Serial No: N/A				
Tested	10/21/2019 - 13:04	Status: Pass				
	Load/Reading 9286 / 9225	18715 / 18700	28984 / 29000	38887 / 38900		Test: p
Set DD28	Scale Mfr/Model: Haenni / W101	Serial Nos: 27256 & 27257				
	Indicator Mfr/Model:	Serial No:				
Tested	10/17/2019 - 12:26	Status: Pass				
	Load/Reading 9122 / 9200	18532 / 18675	28373 / 28550	38893 / 39000		Test: p
Set DD29	Scale Mfr/Model: Haenni / W101	Serial Nos: 27258 & 27259				
	Indicator Mfr/Model:	Serial No:				
Tested	10/21/2019 - 12:58	Status: Pass				
	Load/Reading 8576 / 8600	19281 / 19325	29306 / 29475	39058 / 39200		Test: p
Set DD30	Scale Mfr/Model: Haenni / WL101	Serial Nos: 28874 & 28875				
	Indicator Mfr/Model: N/A / N/A	Serial No:				
Tested	10/15/2019 - 9:08	Status: Pass				
	Load/Reading 8994 / 9075	19373 / 19375	29354 / 29400	39636 / 39750		Test: p
Set DD31	Scale Mfr/Model: Haenni / WL101	Serial Nos: 30180 & 30181				
	Indicator Mfr/Model: N/A / N/A	Serial No:				
Tested	10/16/2019 - 12:44	Status: Pass				
	Load/Reading 8755 / 8900	18980 / 19100	28570 / 28800	38091 / 38400		Test: p
Set DD32	Scale Mfr/Model: Haenni / WL101	Serial Nos: 30182 & 30183				
	Indicator Mfr/Model: N/A / N/A	Serial No:				
Tested	10/22/2019 - 11:16	Status: Pass				
	Load/Reading 9397 / 9525	18931 / 19125	28817 / 28900	39277 / 39500		Test: p
Set DD33	Scale Mfr/Model: Haenni / WL101	Serial Nos: 30185 & 30186				
	Indicator Mfr/Model: N/A / N/A	Serial No:				
Tested	10/15/2019 - 9:16	Status: Pass				
	Load/Reading 8803 / 8750	19514 / 19475	29129 / 29050	38891 / 38950		Test: p
Set DD34	Scale Mfr/Model: Haenni / WL101	Serial Nos: 30187 & 30188				
	Indicator Mfr/Model: N/A / N/A	Serial No:				
Tested	10/15/2019 - 9:24	Status: Pass				
	Load/Reading 9933 / 9800	19622 / 19450	29443 / 29125	39476 / 39100		Test: p
Set DD35	Scale Mfr/Model: Haenni / WL101	Serial Nos: 31473 & 31474				
	Indicator Mfr/Model: N/A / N/A	Serial No:				
Tested	10/21/2019 - 13:17	Status: Pass				
	Load/Reading 8858 / 8875	19234 / 19225	28907 / 28950	38823 / 39000		Test: p

Set	DD36	Scale Mfr/Model: Haenni / WL101 Indicator Mfr/Model: N/A / N/A	Serial Nos: 31471 & 31472 Serial No:
	Tested	10/17/2019 - 12:30	Status: Pass
		Load/Reading 8770 / 8900	18366 / 18525
		28209 / 28400	38509 / 38850
			Test: p
Set	DD37	Scale Mfr/Model: Haenni / WL101 Indicator Mfr/Model: N/A / N/A	Serial Nos: 31469 & 31470 Serial No:
	Tested	10/23/2019 - 11:33	Status: Pass
		Load/Reading 9319 / 9400	19046 / 19150
		29275 / 29300	38855 / 39000
			Test: p
Set	DD38	Scale Mfr/Model: Haenni / WL101 Indicator Mfr/Model: N/A / N/A	Serial Nos: 32252 & 32253 Serial No:
	Tested	10/17/2019 - 12:17	Status: Pass
		Load/Reading 8708 / 8800	18824 / 18850
		28700 / 28775	38763 / 38975
			Test: p
Set	DD39	Scale Mfr/Model: Haenni / WL101 Indicator Mfr/Model: N/A / N/A	Serial Nos: 32254 & 32255 Serial No:
	Tested	10/21/2019 - 13:13	Status: Pass
		Load/Reading 8868 / 8925	18811 / 18850
		28994 / 29000	39094 / 39025
			Test: p
Set	DD40	Scale Mfr/Model: Haenni / WL101 Indicator Mfr/Model: N/A / N/A	Serial Nos: 32256 & 32257 Serial No:
	Tested	10/16/2019 - 12:54	Status: Pass
		Load/Reading 8934 / 8900	18917 / 18925
		28451 / 28500	38081 / 38200
			Test: p
Set	DD41	Scale Mfr/Model: Haenni / WL101 Indicator Mfr/Model: N/A / N/A	Serial Nos: 33443 & 33444 Serial No:
	Tested	10/21/2019 - 13:10	Status: Pass
		Load/Reading 8992 / 8925	18353 / 18425
		29415 / 29350	39199 / 39200
			Test: p
Set	DD42	Scale Mfr/Model: Haenni / WL101 Indicator Mfr/Model: N/A / N/A	Serial Nos: 38250 & 38251 Serial No:
	Tested	10/21/2019 - 13:21	Status: Pass
		Load/Reading 8518 / 8525	19170 / 19175
		29095 / 29075	39255 / 39200
			Test: p
Set	DD43	Scale Mfr/Model: Haenni / WL101 Indicator Mfr/Model: N/A / N/A	Serial Nos: 38714 & 38715 Serial No:
	Tested	10/23/2019 - 11:25	Status: Pass
		Load/Reading 8943 / 9050	19489 / 19500
		29205 / 29200	39247 / 39350
			Test: p
Set	DD44	Scale Mfr/Model: Haenni / WL101 Indicator Mfr/Model: N/A / N/A	Serial Nos: 39188 & 39189 Serial No: N/A
	Tested	10/23/2019 - 8:38	Status: Pass
		Load/Reading 9287 / 9250	19189 / 19050
		29604 / 29400	39435 / 39250
			Test: p
Set	DD45	Scale Mfr/Model: Haenni / WL101 Indicator Mfr/Model: N/A / N/A	Serial Nos: 39190 & 39191 Serial No: N/A
	Tested	10/17/2019 - 12:35	Status: Pass
		Load/Reading 8935 / 8900	19151 / 19050
		28618 / 28600	38485 / 38500
			Test: p
Set	DD46	Scale Mfr/Model: Haenni / WL101 Indicator Mfr/Model: N/A / N/A	Serial Nos: 39192 & 39193 Serial No: N/A
	Tested	10/17/2019 - 12:40	Status: Pass
		Load/Reading 8931 / 9000	19183 / 19175
		28545 / 28500	38340 / 38350
			Test: p

Set DD47	Scale Mfr/Model: Haenni / WL101	Serial Nos: 39755 & 39756
	Indicator Mfr/Model: N/A / N/A	Serial No: n/a
Tested	10/16/2019 - 13:00	Status: Pass
	Load/Reading	8912 / 8900 18935 / 18825 28538 / 28550 38771 / 38750 Test: p
Set DD48	Scale Mfr/Model: Haenni / WL101	Serial Nos: 39757 & 39758
	Indicator Mfr/Model: N/A / N/A	Serial No: n/a
Tested	10/16/2019 - 13:05	Status: Pass
	Load/Reading	8887 / 8800 18931 / 18900 29194 / 29200 38377 / 38450 Test: p
Set DDD2	Scale Mfr/Model: Intercomp / AX900	Serial Nos: 13001/13003 & 13002/13004
	Indicator Mfr/Model: Intercomp / PT-20	Serial No: 12181F13001
Tested	10/17/2019 - 13:09	Status: Pass
L1	Load/Reading	5000 / 5000 10000 / 10000 15000 / 15000 20000 / 20000 Test: p
L1a	Load/Reading	25000 / 25000 30000 / 30200 Test: p
L2	Load/Reading	5000 / 5000 10000 / 10000 15000 / 15000 20000 / 20000 Test: p
L2a	Load/Reading	25000 / 25000 30000 / 29900 Test: p
R1	Load/Reading	5000 / 5000 10000 / 10000 15000 / 15000 20000 / 20000 Test: p
R1a	Load/Reading	25000 / 25050 30000 / 30000 Test: p
R2	Load/Reading	5000 / 5000 10000 / 10000 15000 / 15000 20000 / 20000 Test: p
R2a	Load/Reading	25000 / 25000 30000 / 30000 Test: p

Weights and Measures Officials

Carl H. Bente
M. H. [unclear]
[unclear]

Enforcement Officials

[Signature]